IMPORTANT: PLEASE FOLLOW THESE INSTRUCTIONS TO ENSURE WE SUPPLY THE CORRECT BIDET


- 1. Please bring a measuring tape and gloves.
- **2.** Please take 3 photographs of the toilet area, above the toilet, 1 of the entire toilet area, 1 showing the water supply inlet on the wall, also **1 Photo** of the power box to ensure it has an **RCD** switch.
- **3. When completed** please submit via email to ot@thebidetshop.com.au or if you require help with the completion of the form while at the clients home please feel free to Call 1300 243 387.



REMOTE EVALUATION CHECK LIST - Please Answer All Questions 1. Client Details Client Name Phone Number Postal Address Suburb Postal Code State Is your client a DVA? DVA No. If not then what fund are they with? **Fund Group** Occupational Therapist O.T Ph. O.T. Email Bidet delivery to Client Plumber 2. Toilet Measure & Check PLEASE TAKE PHOTOS OF TOILET PLEASE TAKE PHOTOS OF TOILET (I) Toilet Measurements See page 2-3 Diagrams See page 2-3 Diagrams (A/A.1)mm for more Information for more Information **(B)** mm **(C)** mm **A.1 (D)** mm В (II) Where is the water tap located? In Cistern Outside (III) Access to the toilet seat bolts is from... **BOLTS Underneath Top Only** Is there a lip at the back of the toilet bowl? YES NO Pedestal is secure? YES NO Toilet bowl type **SQUARE** ROUND 3. Toilet Location Is the toilet in the bathroom? YES NO What level is the toilet on? Ground LvI1 Lvl2+ Are the walls fully tiled? Home uses town water? YES YES NO NO Power point installation needed? Home is double brick? YES YES NO NO Shower head on flexible hose? YES NO Is the home in a remote area? YES km to CBD NO Shower screen/curtain between shower & toilet? YES NO If 'NO' Distance from shower head to toilet? metres 4. Client Requirements Please choose the required extras that will be needed Ability to lower/lift themselves? YES NO Client Height Client weight cm kg Raisers 80mm Arms **Bariatric** 50mm 3 in 1 Remote Holder Splash Guard **Tamper Proof Holder** Pee Guard 5. Plumbing Requirments - 80mm Raiser or RPZ Valve Installation (to comply with plumbing code AS/NZS 3500, see p.3) IF no 80mm raiser is selected above THEN an 'RPZ Valve' MUST be installed. **RPZ REQUIRED** YES NO 6. RCD Power box All homes under 15yrs old should have this as standard. Does the home have an RCD Fitted? **RCD EXAMPLE** YES NO O How old is the house? yrs **PLEASE TAKE** NO Is an internal fitting kit required? YES **А РНОТО** Power Power Lights

www.aidacare.com.au 1300 133 120

GUIDE - Locating Measurements / Water tap / Seat bolts

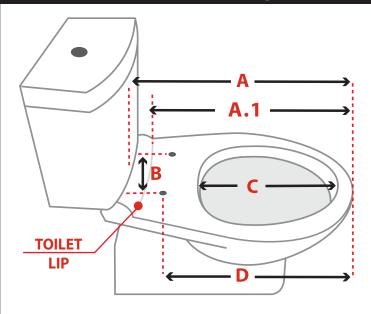


(1)

Fitting measurements needed

- (A) Front (centre) of cistern to front (centre) of bowl
- (B) Centre to centre of bolt holes
- (C) Back (inside centre) to front (inside centre) of bowl
- (D) Bolt holes to front of bowl

(A.1) If toilet bowl is not flat all the way to the cistern (lip) measure from the lip to front (centre) of bowl.

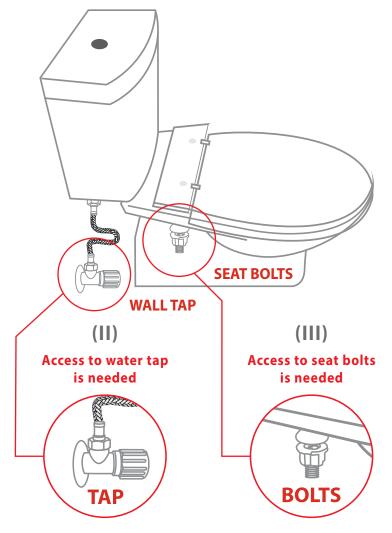


Some toilets may not have access to seat bolts from underneath see STYLE GUIDE below

STYLE GUIDE - Close Coupled / Back To Wall / Wall Hung



Close coupled toilet (Often have a lip at the back of pan)

Close Coupled Toilets, most have curved lips at back of pan to cistern, a measurement front of cistern to front edge of pan NEEDS TO BE A LEVEL measurement.

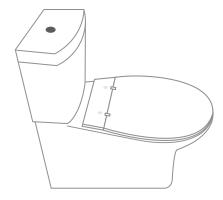


Back To Wall suites (often no bolt access from underneath

TOP FIXING BOLTS REQUIRED)

A modern style, often there is no access to the seat bolts from underneath in this style.

If the water supply tap is inside the cistern/tank then an internal fitting kit is required, please state on the order.

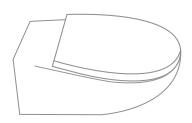

Wall Hung suites

(often no bolt access from underneath TOP FIXING BOLTS REQUIRED)

Some have access to seat bolts. Will fit most Round Seats, water access to be determined.

If the water supply tap is inside the inside wall then a seperate cistern tap is required for water feed to bidet. If this cannot be done then alternative solutions from nearby water source will be discussed.

Page 2 of 3

www.aidacare.com.au 1300 133 120

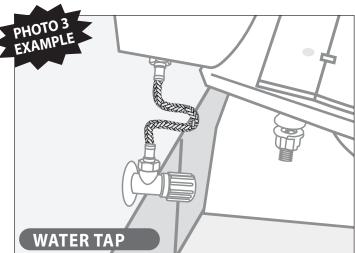



PHOTO GUIDE - Below are examples of photos needed









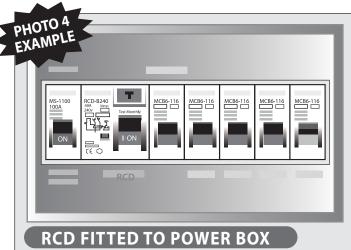

INSTALLATION & PLUMBING - AS 3500.1

IF no 80m m raiser is being installed **THEN** an 'RPZ Valve' **MUST** be installed.

Plumbing Regulations as per AUS/NZ standards

A toilet seat douche or bidet must comply with AS/NZS 3500 Part 1 Water Services Clause 12.2.3.

A douche outlet installed at least 25mm above the overflow level of the pan, at any position, does not require a backflow prevention device. If the douche outlet is less than 25mm above the overflow level of the pan, at any position, a 'high hazard' backflow prevention device must be installed. The device must comply with AS/NZS 2845.1 or AS 2845.2.

SUMBITTING FORM

Please submit this form with the photos and provide all billing information for the funding company. If no billing information is provided we will put the quote into the clients name.

OR if the client is DVA please submit this form and photos with the DOF and ATI.

Submit via email to ot@thebidetshop.com.au

Page 3 of 3

www.aidacare.com.au 1300 133 120